

Thermo Scientific Orion Star A122
Conductivity Portable Meters
make it easy and affordable
to take simple, accurate
conductivity measurements.

Thermo Scientific Orion Star A122 Conductivity Portable Meter




Thermo Scientific Orion Star A122 Conductivity Portable Meters combine simplicity with accuracy. A large LCD displays conductivity or TDS readings along with temperature. Icons provide quick updates on battery life and completed calibration status. Simple button layout and onscreen messages help with calibration and setup menu choices.

Features and Benefits

- Large, informative screen clearly shows the main information, including conductivity or TDS reading, temperature in °C or °F, meter mode and battery life
- Don't miss a reading – AUTO-READ™ locks in the stable reading on your screen and ready indicator alerts when readings are stable

- Selectable cell constant
- Manual calibration or automatic calibration when using a Thermo Scientific Orion conductivity standard (sold separately)
- Selectable reading reference temperatures of 20 °C or 25 °C for an accurate result
- Non-volatile memory holds up to 50 data points
- Four AA batteries (included) provide over 2000 hours of operation or purchase the universal power adapter (sold separately) to run meter on AC power
- Perfectly portable, waterproof and protected to take anywhere with a IP67-rated housing
- 3 year meter replacement warranty

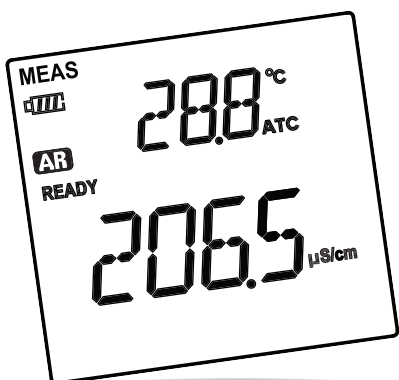

Thermo Scientific Orion Star A122 Conductivity Portable Meter

Specifications



Conductivity	Range	0.1 $\mu\text{S}/\text{cm}$ to 200 mS/cm
	Resolution	0.01 μS minimum; 3 significant figures minimum
	Relative Accuracy	0.5 % reading ± 1 digit
	Reference Temperature	20, 25 $^{\circ}\text{C}$ (default)
	Temperature Compensation	Linear (0.0 to 10.0 $\%/^{\circ}\text{C}$)
	Compatible Cell Constants	0.001 to 10
	Number of Calibration Points	1
	TDS	Range
Resolution		4 significant digits
Relative Accuracy		0.5 % reading ± 1 digit
TDS Factor Range		Linear 0.01 to 10.00, default 0.49
Temperature	Range	-5 to 105 $^{\circ}\text{C}$, 23 to 221 $^{\circ}\text{F}$
	Resolution	0.1
	Relative Accuracy	± 0.1
	Temperature Offset Calibration	Yes
Datalogging	Number of Points	50
	Log Function	Manual, Automatic with AUTO-READ™
	Log Edit	Delete last reading or all
Inputs	Conductivity	8-pin mini-DIN
Power	AC Adapter	Optional – universal, 100-240 VAC
	Battery Power	Included – 4 AAs
	Battery Life	2000 hrs

Ordering Information

Cat. No.	Description
Meters Only	
STARA1220	Orion STAR A122 Conductivity Portable Meter - Four AA batteries (installed)
STARA1225	Orion STAR A122 Conductivity Portable Meter Kit - 011050MD Orion conductivity cell, $K=1.0$ - 011007 conductivity standard, 1413 μS , 5x60 mL - 911110 rinse solution, 10 pouches - Protective armor with electrode holder - Hard carrying case - Four AA batteries (installed)
Accessories	
STARA-CS	Hard carrying case for Orion Star A-series portable meters
STARA-AR	Armor for Orion Star A-series portable meters, includes electrode holders for pH, conductivity and DO probes
STARA-ESCD	Conductivity and DO probe holder for Orion Star A-series armor
STARA-ESPH	pH electrode holder for Orion Star A-series armor
011050MD	Orion 2-electrode conductivity cell, $K=1.0$
1010003	Optional universal power adapter, 100-240 V, 50/60 Hz
011008	Orion conductivity standard, 100 $\mu\text{S}/\text{cm}$, 5x60 mL bottles
01100710	Orion conductivity standard pouches, 1413 $\mu\text{S}/\text{cm}$, 10/pk
01100610	Orion conductivity standard pouches, 12.9 mS/cm , 10/pk
911110	Rinse solution, 10/pk
1010001	Orion conductivity calibration resistor kit

For more information, contact your local Thermo Scientific products dealer or call our customer and technical service experts at 1-800-225-1480 (for the US and Canada) or visit www.thermoscientific.com/water.

©2011 Thermo Fisher Scientific Inc. All rights reserved. All trademarks are the property of Thermo Fisher Scientific Inc. and its subsidiaries. ROSS and the COIL tradenames are trademarks of Thermo Fisher Scientific Inc. US Patent 6,793,787.



S-STARA122-E-0811-RevA

Water Analysis Instruments
www.thermoscientific.com/water

North America
166 Cummings Center
Beverly, MA 01915 USA
Toll Free: 1-800-225-1480
Tel: 1-978-232-6000
info.water@thermo.com

Netherlands
Tel: (31) 033-2463887
info.water.uk@thermo.com

China
Tel: (86) 21-68654588
wai.asia@thermofisher.com

India
Tel: (91) 22-4175-8800
wai.asia@thermofisher.com

Singapore
Tel: (65) 6778-6876
wai.asia@thermofisher.com

Japan
Tel: (81) 045-453-9175
wai.asia@thermofisher.com

Australia
Tel: (613) 9757-4300
infowaterau@thermofisher.com

Thermo
SCIENTIFIC